





## Power-Up

At power-up the remote FOB function has a ten second delay. Failure to wait for this ten seconds can make the wait time much longer.

## Lift Operation

The remote FOB is non-functional until it is enabled by depressing the lower right button momentarily. After the initial ten second delay, depressing the unlock button enables operation using the remote FOB. The lockout is re-enabled after 60 seconds without a button press. Lift operation using the FOB is limited to 120 seconds of continuous operation. If a longer cycle is needed it is necessary to release and then re-depress the button.

## Low Battery Lockout

This control incorporates a low voltage lockout which is intended to protect the battery from abuse and over-discharge. When the battery drops below the low battery threshold during pump operation, further activation using the FOB is not allowed. The manual switches will allow the lift to operate if sufficient battery power is present. The battery needs to be checked prior to further operation.

## FOB Programming

At initial power up there is a five second window when it is possible to reprogram the receiver to enroll a remote FOB. Up to four FOBs may be enrolled. If a fifth FOB is enrolled, the first enrolled FOB will fall off the list. To enroll a FOB turn off the power to the lift for fifteen or more seconds. When power is turned back on press both the UP and DOWN buttons on the FOB simultaneously. This must be done within the first five seconds after power is applied.

## Lighting Circuit

The lighting circuit is activated whenever the lift is operated. The lights stay on for 2 minutes after the lift is operated. The lights may be manually turned on or off by depressing the lower left button on the remote FOB. When manually enabled the lights will automatically turn off after 4 minutes. This prevents accidental battery discharge.

## Storage

Always leave the boat in the fully raised, Over-Center™ position with the power off.