

Typical lift shown with optional features.



Jack height and jaw opening can be adjusted with a 1/2" drive ratchet. Do not use an impact wrench - it may damage the mechanism.



For each wheel: retract the jack and place the wheel on the side of the lift near the center and tighten the jaw. Remove the pin on the center post and let the wheel down. Replace the pin, leaving the wheel as close to the ground as possible.

Adjust the jacks evenly side to side until the lift can be moved. Do not move the lift on land at more than a walking pace.

Once on land, lower the jacks until the lift rests on its feet before loosening the jaws.

Each wheel may be stored standing up if the center post is adjusted as shown.

**THE JACK HAS 15" OF ADJUSTMENT. THE CENTER POST HAS 12" OF ADJUSTMENT, FOR A TOTAL OF 27" OF ADJUSTMENT.**

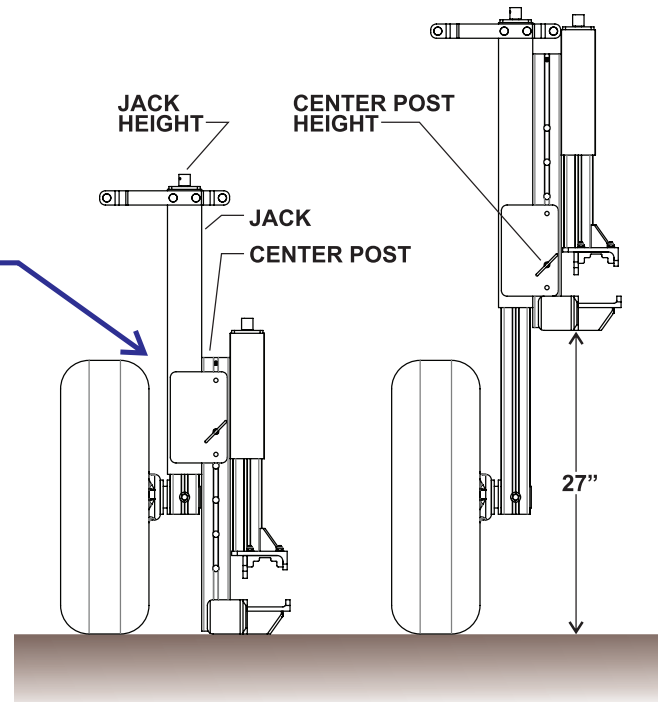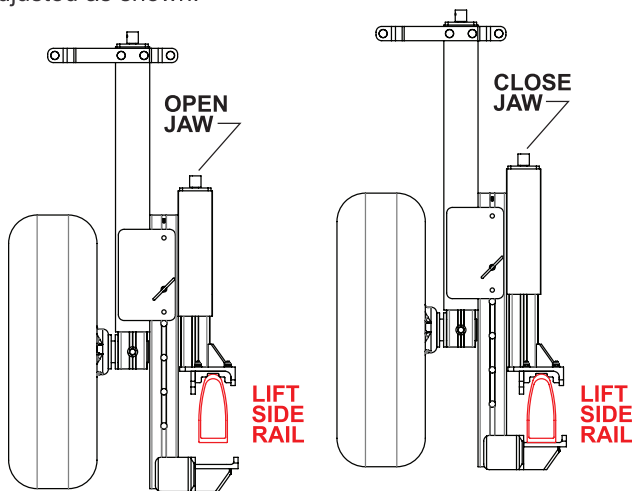

**WARNING**  
DO NOT ATTEMPT TO USE THIS KIT WITH A BOAT ON THE LIFT.  
MAXIMUM LOAD - 1,600 LBS.

Specifications subject to change.