


CURRENT
White Case
R811-0010



CURRENT
White Case
R811-0010



**For use on dual
lift systems**
R811-0012

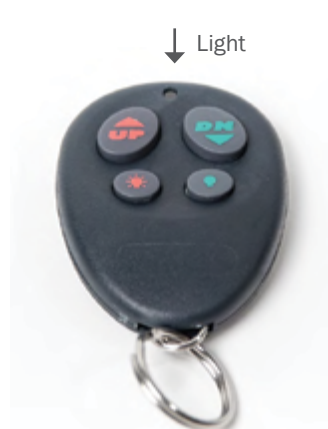

LEGACY
Black Case with Green Light
SKU: R811-0009



LEGACY
White Case with Red Light
Red Light R811-0008



LEGACY
White Case with Green Light
Green Light R811-0007

LEGACY REMOTE INSTRUCTIONS R811-0009



LEGACY

Black Case with Green Light

SKU: R811-0009

FOB PROGRAMMING

1. Erase the Memory- Use the tip of a pen to push all the switches into the ON position. Wait 15 seconds. Push all the switches into the OFF position.
2. Program One Fob- Push switch #1 into the ON position. Push the UP button on one of the fobs for a few seconds. Push switch #1 back into the OFF position.
3. Repeat step 2 for additional Fobs.

TROUBLESHOOTING

If fob worked previously, but does not currently, replace fob battery or verify fob battery has greater than 12v. If the fob battery has been replaced and the LED does not light, the key fob needs replacement. If fob light works but fob does not work after replacement of fob battery, load test boat lift battery ensuring voltage does not drop below 11v while in use. If you have questions, contact your local dealer or Basta Boatlifts.

BATTERY REPLACEMENT

Fob uses 12-Volt Type 23 AP Battery, commonly found on-line or at drug / hardware stores. Part numbers vary by manufacturer.



LOW BATTERY LOCKOUT


The remote control contains a low voltage lockout which is intended to protect the boat lift's battery from over-discharge. When the battery drops below the low battery threshold during operation, further use of the fob is not allowed. The manual UP/DOWN switches will allow the lift to operate when sufficient battery power is present. The boat lift should be checked and charged prior to further operation.

UNDERWATER LIGHTS

The underwater lights are activated whenever the lift is operated. The lights stay on for 2 minutes after the lift is operated. The lights may be manually turned on or off by depressing the lower left and right button on the remote fob. When manually enabled the lights will automatically turn off after 4 minutes. This prevents accidental battery discharge.

STORAGE

In general, we recommend storing the boat lift in the upright position preventing it from being an unknown hazard underwater. Store with the power off.

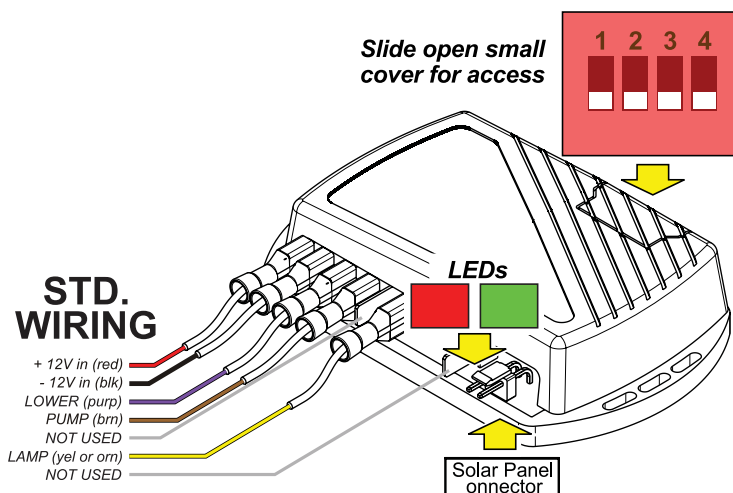

LEGACY REMOTE INSTRUCTIONS R811-0007/0008



LEGACY


White Case with Green Light
Green Light

LEGACY

White Case with Red Light
Red Light

FOB PROGRAMMING

1. Turn on the power switch located on the top of the control panel in the pump box.
2. Locate the small red button under the sliding cover of the white remote control receiver located on the side of the control panel. This is the programming button.
3. Push the programming button until the programming LED next to the button turns on. Release the programming button.
4. Press the UP button on one key fob until the programming LED turns off. Release the fob button.
5. Press the UP button on the key fob again. The programming LED should blink slowly. Release the fob button.
6. Repeat steps 3-5 for your other fob.

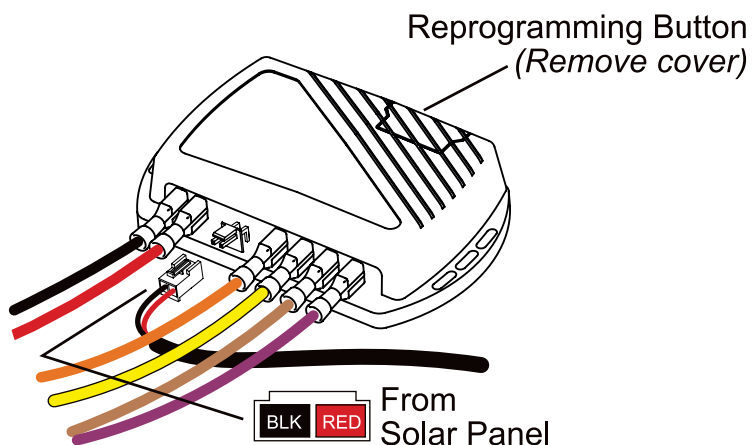

TROUBLESHOOTING

If fob worked previously, but does not currently, replace fob battery or verify fob battery has greater than 12v. If the fob battery has been replaced and the LED does not light, the key fob needs replacement. If fob light works but fob does not work after replacement of fob battery, load test boat lift battery ensuring voltage does not drop below 11v while in use. If you have questions, contact your local dealer or Basta Boatlifts.

BATTERY REPLACEMENT

Fob uses 12-Volt Type 23 AP Battery, commonly found on-line or at drug / hardware stores. Part numbers vary by manufacturer. (we have found the Duracel battery 21/23 do not fit correctly in our remotes)



LOW BATTERY LOCKOUT

The remote control contains a low voltage lockout which is intended to protect the boat lift's battery from over-discharge. When the battery drops below the low battery threshold during operation, further use of the fob is not allowed. The manual UP/DOWN switches will allow the lift to e boat lift should be checked and charged prior to further operation.

UNDERWATER LIGHTS

The underwater lights are activated whenever the lift is operated. The lights stay on for 2 minutes after the lift is operated. The lights may be manually turned on or off by depressing the lower left and right button on the remote fob. When manually enabled the lights will automatically turn off after 4 minutes. This prevents accidental battery discharge.

STORAGE

In general, we recommend storing the boat lift in the upright position preventing it from being an unknown hazard underwater. Store with the power off.

LEGACY REMOTE INSTRUCTIONS R811-0010



legacy:

White Case with no LED Light

FOB POWER-UP

After turning on the ON/OFF switch in the dock box, the fob receiver requires a 5 second delay before the fob is enabled.

FOB OPERATION

Depress the unlock button (lower right), this will allow normal operation of the fob. The lockout is re-enabled after 60 seconds without a button press. Lift operation using the fob is limited to 120 seconds of continuous operation. If a longer cycle is needed it is necessary to release button and then re-depress.

FOB PROGRAMMING

1. Turn off the ON/OFF switch.
2. Wait 15 seconds.
3. Turn power back on, and within 5 seconds of power on, press both the UP and DOWN buttons on the fob simultaneously for 1 second then release.
4. Repeat steps 1-3 for additional Fobs. Up to four fobs may be enrolled. If a fifth fob is enrolled, the first enrolled fob will fall off the list.

BATTERY REPLACEMENT

Fob uses CR2032, 3 volt battery, commonly found on-line or at drug /hardware stores. Part numbers vary by manufacturer.



LOW BATTERY LOCKOUT

The remote control contains a low voltage lockout which is intended to protect the lift's battery from over-discharge. When the battery drops below the low battery threshold during operation, further use of the fob is not allowed. The manual UP/DOWN switches will allow the lift to operate when sufficient battery power is present. The lift should be checked and charged prior to further operation.

TROUBLESHOOTING

If fob worked previously, but does not currently, replace fob battery or verify fob battery has greater than 3v. If fob does not work after replacement of fob battery, load test lift battery ensuring voltage does not drop below 11v while in use. If you have questions, contact your local dealer or Basta Boatlifts.

UNDERWATER LIGHTS

The underwater lights are activated whenever the lift is operated. The lights stay on for 2 minutes after the lift is operated. The lights may be manually turned on or off by depressing the lower left button on the remote fob. When manually enabled the lights will automatically turn off after 4 minutes. This prevents accidental battery discharge.


STORAGE

In general, we recommend storing the boat lift in the upright position preventing it from being an unknown hazard under water. Store with the power off.

DUAL REMOTE PROGRAMMING LEGACY REMOTE



In addition to the 10 amp master fuse, each computer has its own 5 amp fuse. At power up there is a five second window when it is possible to reprogram the unit to enroll a remote fob. While enrolling the fobs for one lift, the computer for the other lift must be disabled by unplugging its fuse.

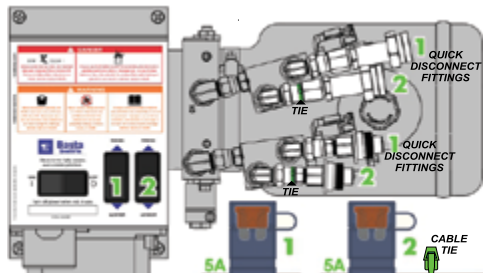

Fuses

Removing the cover panel will allow access to the fuses that you will need to identify.

- 1 – Power Fuse – Do not alter**
- 2 – Remote Fuse**
- 3 – Remote Fuse**



To enroll a fob for Lift 1, turn off the power to the lift for at least fifteen seconds. Remove the fuse for Lift 2 (indicated by a colored cable tie installed next to the fuse holder). Turn the power back on and within 5 seconds press both the UP and DOWN buttons on the fob simultaneously. Turn the power off and repeat for the next fob. Replace the fuse for Lift 2 when done.

To enroll a fob for Lift 2, turn off the power to the lift for at least 15 seconds. Remove the fuse for Lift 1 (NO cable tie installed next to the fuse holder). Turn the power back on and within 5 seconds press both the UP and DOWN buttons on the fob simultaneously. Turn the power off and repeat for the next fob. Replace the fuse for Lift 1 when done.

DUAL REMOTE PROGRAMMING CURRENT REMOTE



Up to four fobs may be enrolled for each lift. If a fifth fob is enrolled, the first enrolled fob will fall off the list.



If a grey wire with yellow stripes is present use this system

1. Turn off the ON/OFF switch.
2. Wait 15 seconds.
3. Press the 'up' switch on the panel.
4. While holding the up switch, Turn power back on, then release the up switch.
5. Within 5 seconds of power on,
 - i. For lift 1 press both the UP and DOWN buttons on the fob simultaneously for 3 seconds then release.
 - ii. For the lift 2 press the Up and UNLOCK buttons on the fob simultaneously for 3 seconds then release
 - ii. For the 6-button remote press the L2 DOWN buttons on the fob for 3 seconds then release
4. Repeat steps 1-3 for additional Fobs. Up to four fobs may be enrolled. If a fifth fob is enrolled, the first enrolled fob will fall off the list.